



Sani-Cide EX3

Disinfectant and Multi-Purpose Cleaner

Sani-Cide EX3 is an EPA registered, aircraft approved, broad-spectrum disinfectant and multi-purpose cleaner all in one convenient product.



Sani-Cide EX3 offers a safe and effective approach to disinfect airplane hard surfaces such as tray tables, armrests, toilets, lavatory door handles, galley workspaces, and any other objects/surfaces which passengers and crew may come in contact with. Sani-Cide EX3 is an effective disinfectant against *Staphylococcus aureus* and *Salmonella enterica* when used as directed.

FEATURES AND BENEFITS

Formulated to Maximize Effectiveness While Meeting Industry Standards

- Biodegradable
- Non-toxic and non-corrosive
- No quaternary ammonium compounds
- Water based, contains no volatile organic compounds (VOCs)
- Does not contribute to an accumulated grimy/dulled appearance
- Highly effective performance—shows substantial soil removal and minimal soil re-deposition—contains agents that prevent soil re-deposition and make subsequent cleanings easier
- Safe for use on glass, mirrors, metal, plastic, leather, fabric, and carpet
- Non-reactive to and fully compatible with all known fire retardant thermoplastics

PROPERTIES	
Flash Point	>98.8°C
VOC	None
Color	Colorless to slightly yellow
Appearance	Thin, transparent liquid

TEST REFERENCES

AMS 1452C
AMS 1550B
Boeing D6-7127

CELESTE PART NO.

Ready To Use


6 oz. Bottles LS-SCIDEX3/6
Quart Bottles LS-SCIDEX3/QT
Gallon Jugs LS-SCIDEX3/GL
55 Gallon Drum LS-SCIDEX3/55

Concentrate


5 Gallon Pail CC-SCIDEX3/5

EPA REG. NO. 42048-4
EPA EST. NO. 42048-MD-001

Percent Soil Removed During Cleaning

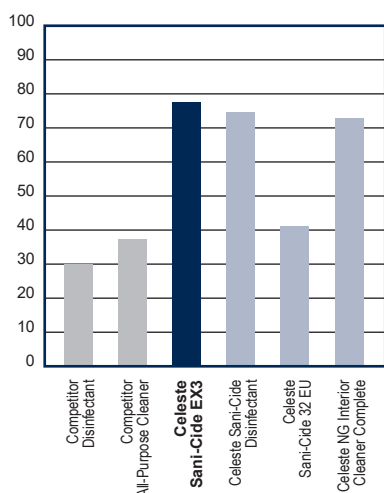

Percent Soil Re-Deposited During Cleaning

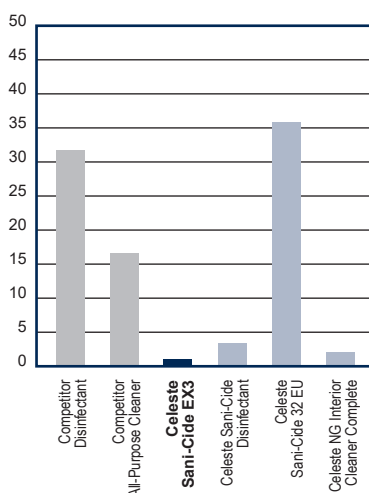

APPLICATION	MINIMUM CONTACT TIME (where applicable)	DIRECTIONS
Cleaning and Disinfection of Hard Surfaces	General Cleaning: 3 minutes Disinfection: 10 minutes	Step 1: Remove gross filth or heavy soil prior to application. Step 2: Hold container 6-8 inches from surface to be treated. Step 3: Spray area until it is covered with the solution. Step 4: Allow to penetrate. Wipe off with a clean cloth, mop, or sponge.
Cleaning and Disinfection of Toilet Bowls	General Cleaning: 3 minutes Disinfection: 10 minutes	Step 1: Apply 1-2 oz. of solution evenly, allowing sufficient time for product to cover entire surface of bowl for maximum disinfection. Step 2: Swab bowl completely using scrub brush or toilet mop, making sure to get under rim. Step 3: Allow to penetrate, then flush.
Mildew Control		Step 1: Preclean surface. Step 2: Spray surface to be treated making sure to wet completely. Step 3: Let air dry. Step 4: Repeat application at weekly intervals or when mildew growth appears.
Companion Products	Biozyme EX3, Deep Cleaning Sponge, NG Interior Cleaner Complete, Sani-Cide FSC	

CELESTE INDUSTRIES CORPORATION

Head Office
8221 Teal Drive, Suite 405
Easton, Maryland 21601 USA
Tel 410.822.5775 •
1.800.447.5775
Fax 410.822.7977

400 Thames Valley Park Drive
Thames Valley Park
Reading
Berkshire, RG6 1PT, England
Tel +44 (0) 1189 637930

celeste[®]

Ready To Use

Concentrate

PACKAGING	CASE DIMENSION	CASE WEIGHT	CASES PER PALLET	PALLET HEIGHT
12 x 6 oz. bottles per case	8 x 6 x 7 in (20 x 15 x 18 cm)	6 lbs (3 kg)	252 cases (36 cases/layer, 7 layers high)	57 in (145 cm)
12 x quart bottles per case	14 x 11 x 11 in (36 x 28 x 28 cm)	30 lbs (14 kg)	44 cases (11 cases/layer, 4 layers high)	53 in (135 cm)
4 x gallon jugs per case	13 x 13 x 12 in (33 x 33 x 30 cm)	36 lbs (16 kg)	27 cases (9 cases/layer, 3 layers high)	57 in (145 cm)
55 gallon drum	36 x 23 in (91 x 58 cm)	470 lbs (213 kg)	4 drums (1 layer)	42 in (107 cm)
5 gallon pail	12 x 10 x 15 in (30 x 25 x 38 cm)	43 lbs (20 kg)	32 pails (16 pails/layer, 2 layers high)	36 in (91 cm)

Storage: Store in a cool, dry, well-ventilated area; avoid freezing
Shelf Life: 24 months from date of manufacture